

BEHRINGER®

Group No.	Stainless Tube	Pipe	Copper Tube	Outside Diameter (mm)	ID Bore (inches)		CHT		CH
					Anchor	Guide	Thread	Threaded Rod Diameter	Dynamic Rod Diameter
1	6 mm			6.0	0.24	0.27	3/8"-16 (10)	1/2" (12) B	5/8" (16)
	1/4"			6.3	0.25	0.29			
	3/8"			9.6	0.38	0.41			
	1/2"			12.7	0.50	0.54			
2		1/4"		13.7	0.54	0.58	3/8"-16 (10)	1/2" (12) B	5/8" (16)
			1/2"	16.0	0.63	0.66			
	3/4"			19.0	0.75	0.79			
3	20 mm			20.0	0.79	0.82	3/8"-16 (10)	1/2" (12) B	5/8" (16)
		1/2"		21.3	0.84	0.88			
			3/4"	22.4	0.88	0.91			
	1"			25.4	1.00	1.04			
4		3/4"		26.7	1.05	1.09	3/8"-16 (10)	1/2" (12) B	5/8" (16)
			1"	28.7	1.13	1.16			
		1"		33.5	1.32	1.35			
	1 1/2"			38.1	1.50	1.54			
5	40 mm			40.0	1.58	1.61	3/8"-16 (10)	1/2" (12) B	5/8" (16)
			1 1/2"	41.4	1.63	1.66			
		1 1/2"		48.3	1.90	1.94			
6	52 mm			52.0	2.05	2.10	3/8"-16 (10)	5/8" (16) C	3/4" (19)
			2"	54.0	2.13	2.18			
		2"		60.3	2.38	2.43			
	2 1/2"			63.5	2.50	2.55			
7	70 mm			70.0	2.76	2.81	3/8"-16 (10)	5/8" (16) C	3/4" (19)
		2 1/2"		73.1	2.88	2.93			
	3"			76.1	3.00	3.05			
8			3"	79.5	3.13	3.18	1/2"-13 (16)	3/4" (19) D	3/4" (19)
		3"		88.9	3.50	3.55			
	4"			101.6	4.00	4.05			
8A	104 mm			104.0	4.09	4.14	1/2"-13 (16)	3/4" (19) D	3/4" (19)
			4"	104.9	4.13	4.18			
		4"		114.3	4.50	4.55			
9	129 mm			129.0	5.08	5.13	3/4"-10 (19)	1" (25) E	1" (25)
	6"			152.4	6.00	6.05			

Distributed by:


Tri-Canada

7033 Telford Way #20, Mississauga, ON L5S 1V4
Tel: 905.677.9000 • Toll Free: 1.800.486.7863
www.tricanada.com

BEHRINGER®

CH Part # Configurator

<u>Mounting Configuration</u> Dynamic = CH Rigid = CHR Weld Plate = CHW Threaded = CHT	CHR	-PS	-150	-T	-06	<u>Rod Length (CH & CHR Only)</u> 06 = 6" OAL 12 = 12" OAL 24 = 24" OAL 36 = 36" OAL
<u>Insert Material</u> Anchor (Black) = PS Guide (Grey) = PG						<u>Hardware Material</u> T = 304 Stainless Steel X = 316 Stainless Steel
<u>Tube or Pipe Size</u> 1.5" Tube = 150 1" Pipe = 132 2" Pipe = 238						

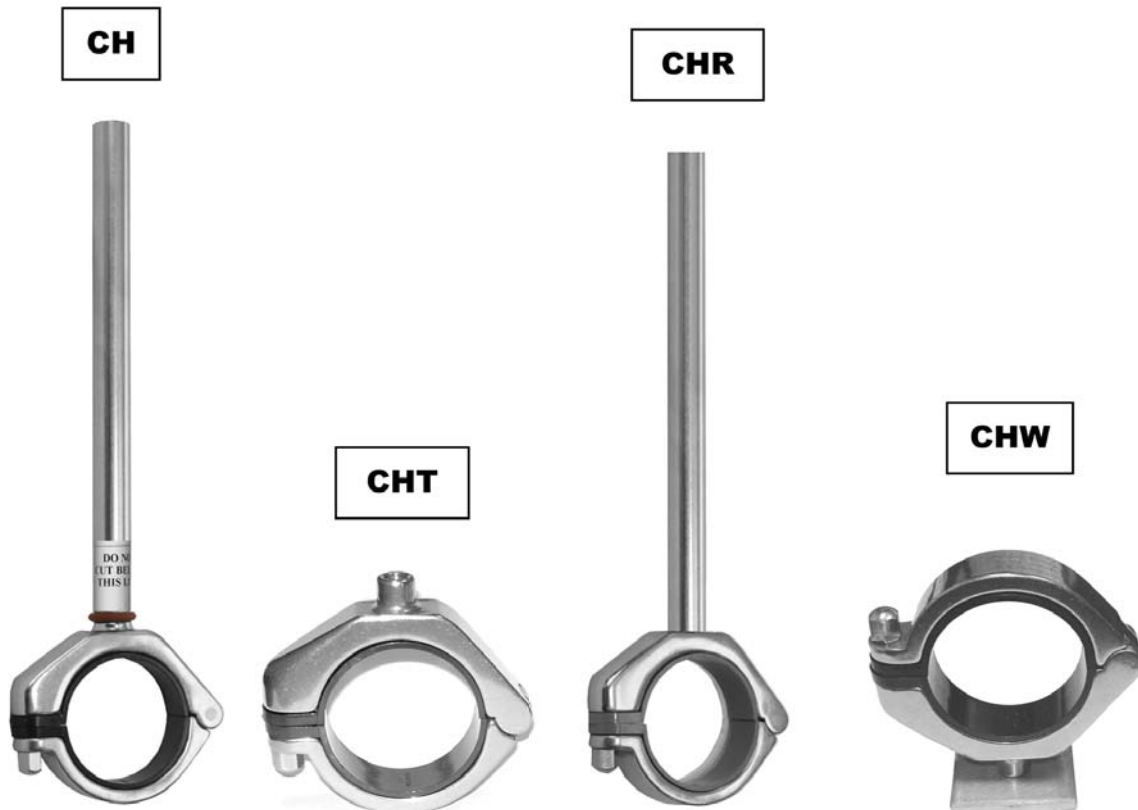

Distributed by:

Tri-Canada

7033 Telford Way #20, Mississauga, ON L5S 1V4
Tel: 905.677.9000 • Toll Free: 1.800.486.7863
www.tricanada.com

Behringer Corporation • 17 Ridge Road • Branchville, NJ 07826

Phone: (973)948-0226 • Fax: (973)948-2562

Website: www.behringersystems.com • email: cserv@behringersystems.com